



INSTALLATION METHOD

PLUMBING THE FRAME

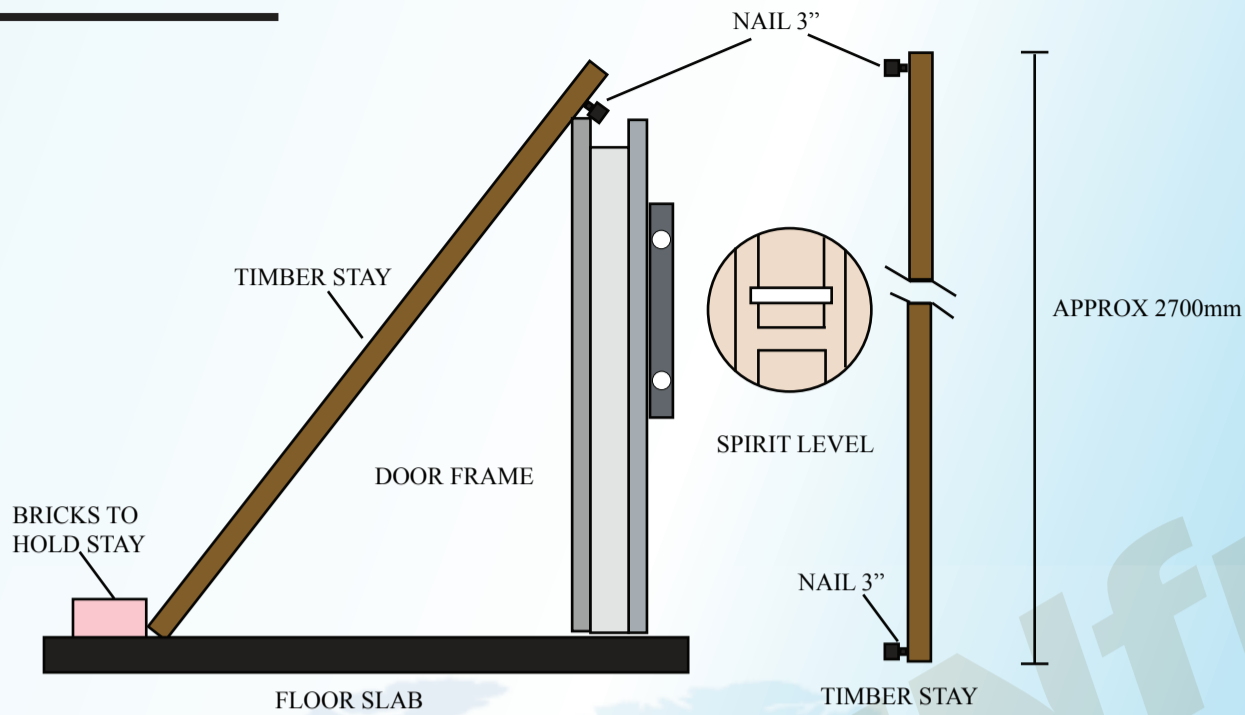

TYPICAL CROSS SECTION SHOWING BRICK TIE INSTALLATION

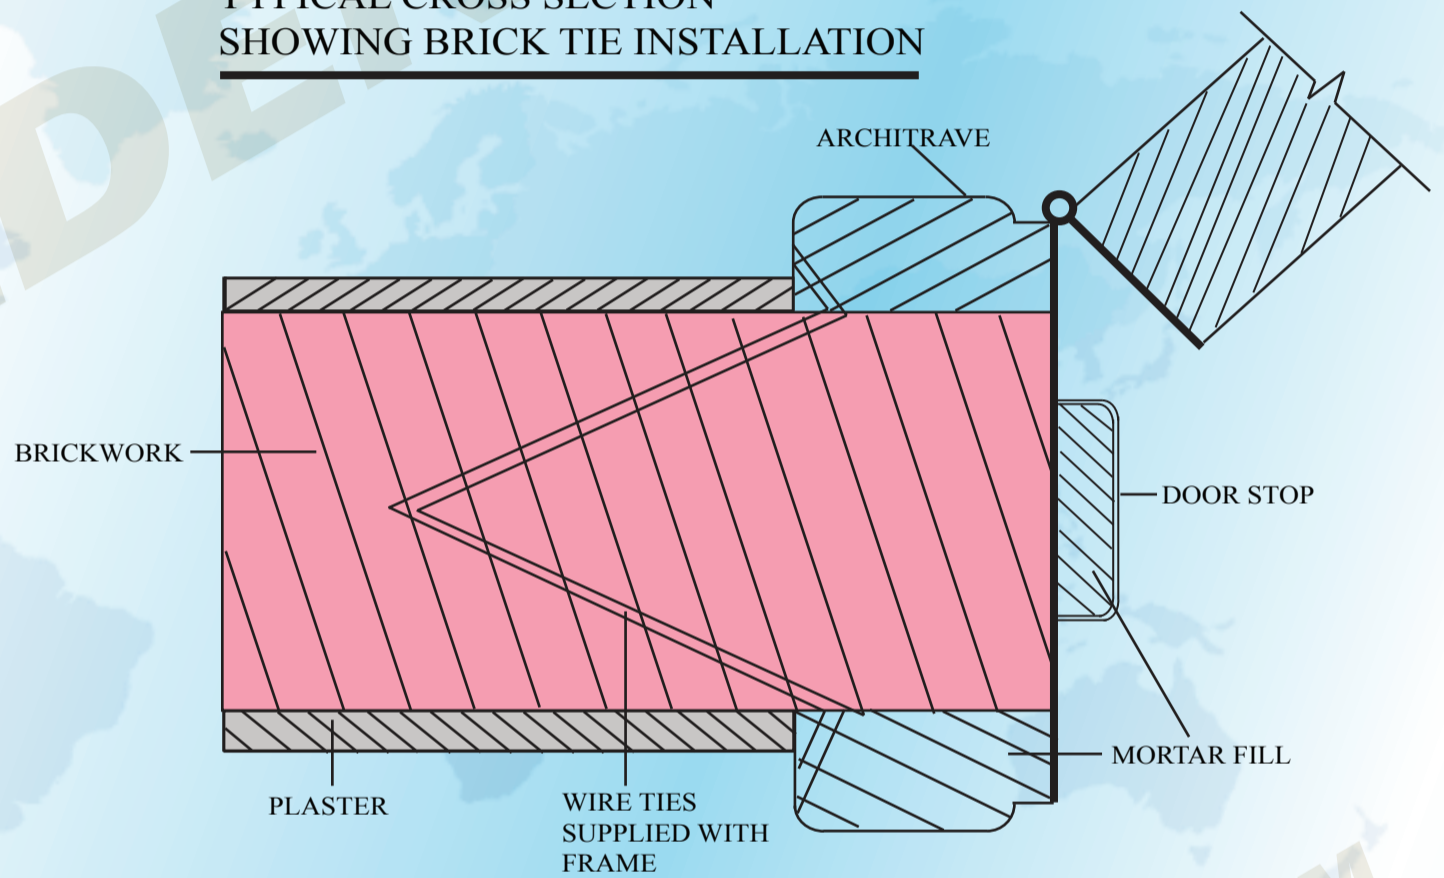

STEP A

PROP UP THE FRAME BY TIMBER AND NAIL EDGE OF THE END OF TIMBER, HOOK UP THE NAIL ONTO THE TOP EDGE OF THE FRAME. USE SPIRIT LEVEL TO ENSURE THE FRAME STAYS IN THE RIGHTS POSITION.



STEP B

LAY BRICKS INTO BACK OPENING OF THE FRAME, INFILL MORTAR INTO THE GAP BETWEEN BRICK AND FRAME. THIS WILL FILL THE FRAME WITH CEMENT AND MAKE BOTH THE WALL AND FRAME RIGID AND STRONG.



STEP C

INSTALL A WIRE TIE WITH EVERY 4-5 COURSE OF BRICKWORK RUN. FOR A WIRE POSITION NEXT TO COLUMN, USE COLUMN TIE TO RIGID INSTALLATION.

